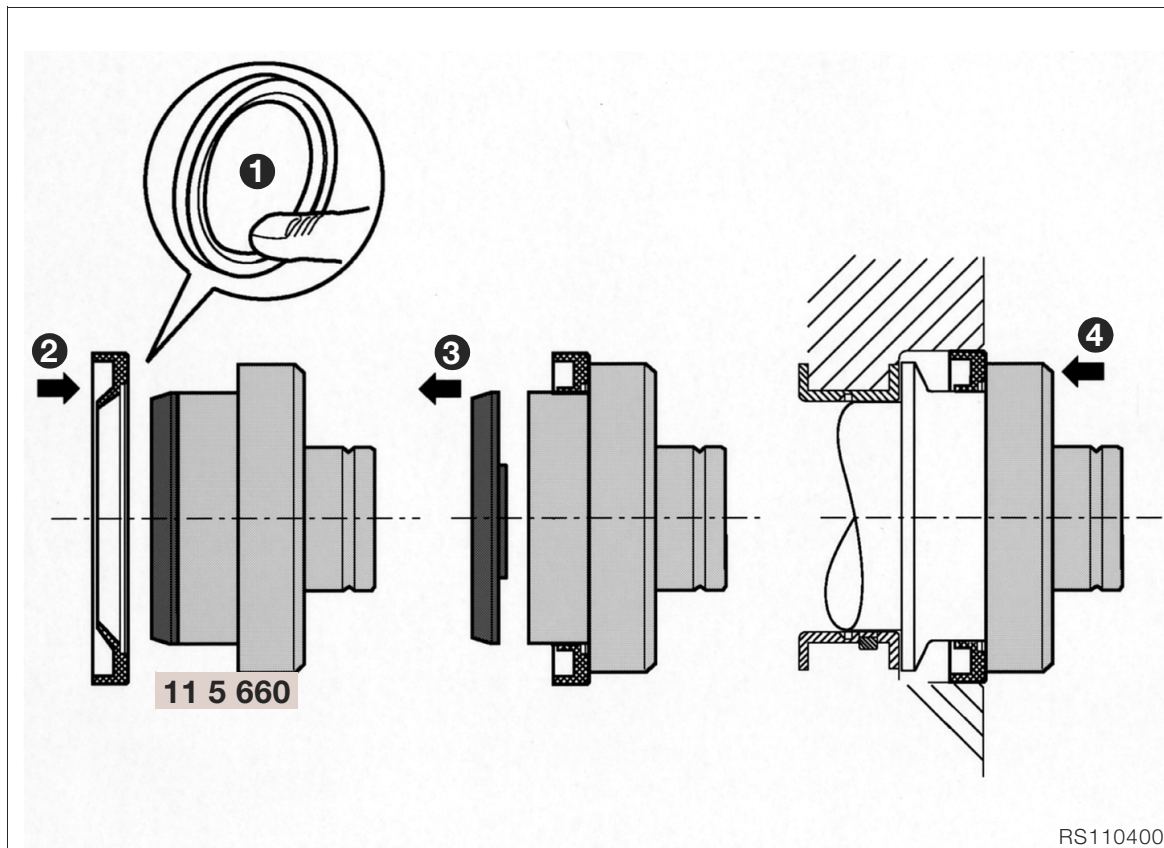


Installing radial seal on crankshaft

- Pre-form the lip of the radial shaft seal carefully by hand (1).
- Oil the radial shaft seal at the sealing/contact surface.
- Place radial seal over sliding sleeve (2)/remove sliding sleeve (3).
- Drive radial shaft seal in with handle, **BMW No. 00 0 500**, and drift with sliding sleeve, **BMW No. 11 5 660** (4).